

Robotic Vacuum

Operation Manual

P4900

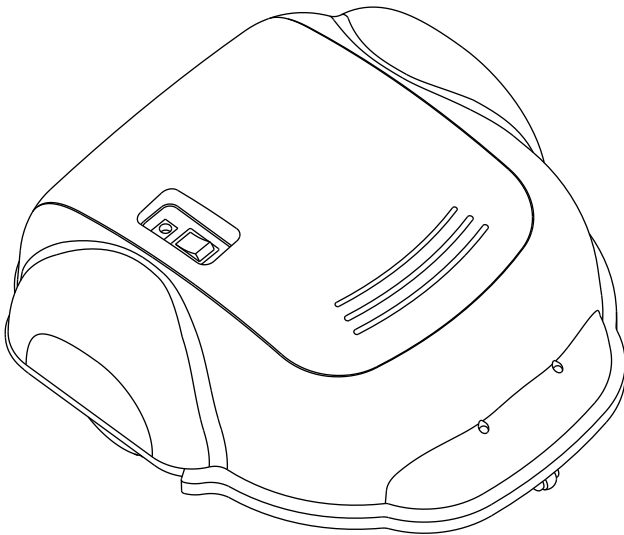 


TABLE OF CONTENTS

Safety Instructions ----- 2

* Safety Rules

* Battery and Recharging Notes

Welcome ----- 3

Major Components and Attachments ----- 3

Nomenclature ----- 4

Mounting and Dismounting Battery ----- 5

Recharging Battery ----- 6

Operation Method ----- 6

* Preparation for Operation

* Starting Operation

* Using Electrostatic Dust Mopping Paper-for non-Carpet Surfaces

Cleaning and Maintenance ----- 8

* Maintenance Method

* Cleaning Dust Bin

* Cleaning Intake

SAFETY INSTRUCTIONS

Please read through the safety rules in this Operation Manual before operating this product and keep this manual for your future reference. The basic safety rules shall be strictly observed to prevent any occurrence of fire, electric shock and personal injury. The safety rules are described below.

Safety Rules

1. Please read through this Operation Manual before operation.
2. It is prohibited to operate outdoors.
3. Keep the cleaner away from water, and never use it in wet room, such as bath and laundry room, as it could damage the unit.
4. Before operation, remove clothes, paper, cable, extension cable scattered on the floor, roll up the curtains and drapes if any to avert the possible accident. In case the cable is entangled into this cleaner, the cable will move around as the cleaner is working and could tip over your table, chairs, even the cabinet and the cupboard.
5. Never stand or sit on the cleaner. Do not operate the cleaner in the presence of children or pets. The unit is not a toy. Do not allow children to operate the cleaner.
6. Never use the cleaner to clean lit cigarettes, cigarette butts, cigarette ash or matches.
7. Never use the cleaner to clean combustible or high volatile liquid such as gasoline.
8. If the room links to the balcony, please close the balcony door to prevent the cleaner from running into the balcony. If the room links to a stairway or steps, use household items to block the opening to the stairway or steps. Otherwise the cleaner will fall down the stairway or steps causing damage.
9. In operation, care shall be taken to avert the heat vent from being clogged which would lead to damage to the cleaner.
10. If the cleaner is out of work or damaged, never use it regardless whatever the trouble may be.
11. If not use for a long time, be sure to turn off the power, and take out the battery.

Battery and Recharging Notes

1. The battery is rechargeable. Please use the voltage and current specified on the packing. If you are not sure of what the voltage and current of your house, please contact your distributor or the local power company.
2. Use the indoor charger only.
3. Use the authorized charger to recharge the battery.
4. Never use the battery again if the cable or plug of the battery is damaged.
5. Never touch the charger, plug and cable with wet hands.
6. If the cleaner itself requires cleaning, stop recharging and take out the battery.

WELCOME


Congratulations on your selection of the P4900 Robotic Vacuum. This unit will provide years of service if cared for properly. You have brought the future of cleaning into your home with the automated Robotic Vacuum. Using its smart programming to move about on its own, it gets in and out of the tightest places to clean your floors.

Use it on carpet (low-pile) or attach the included electrostatic paper to the bottom and sweep all your tile and wood floors clean.


MAJOR COMPONENTS AND ATTACHMENTS

- 1.P4900 Cleaner x1
- 2.Battery Chamber for 12 rechargeable "AA" batteries x1
- 3.Dust bin filter x1
- 4.Operation Manual x1
- 5.Dust Mopping paper holder
- 6.Electrostatic dust mopping paper
- 7.Rechargeable "AA" battery x12
- 8.AC Power transformer x1


1.

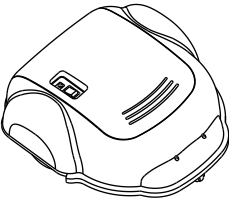

2.

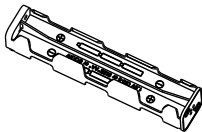

 
3.

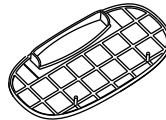

4.



 
5.

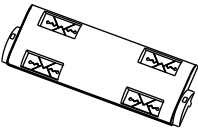


6.




 
7.



 8.




NOMENCLATURE

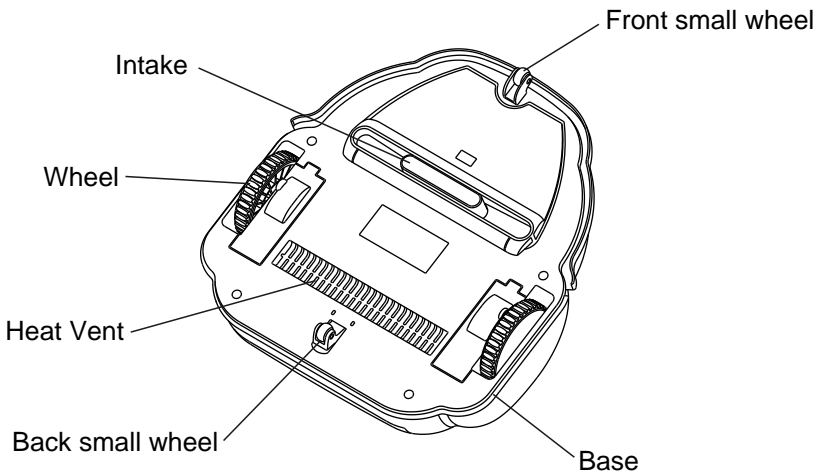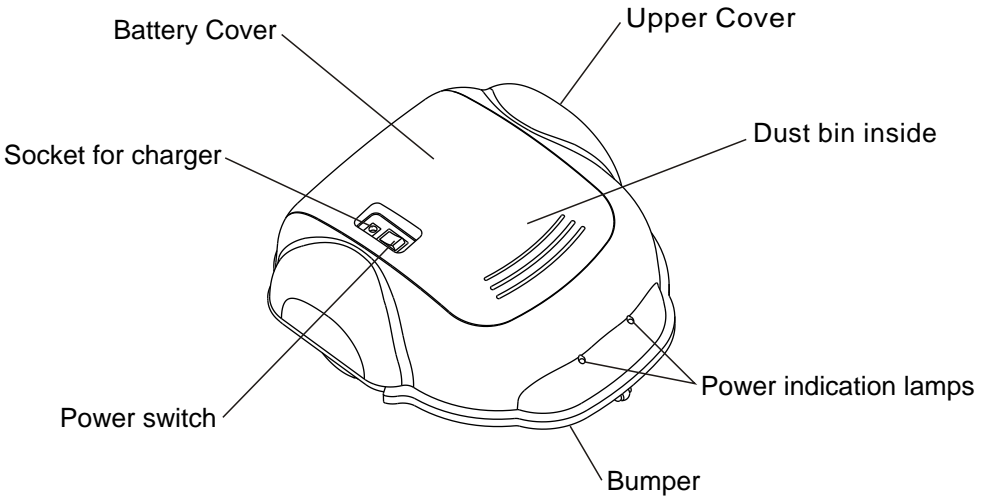  

MOUNTING AND DISMOUNTING BATTERY

 
1. Make sure the smart cleaner is off.
2. Press and push the battery cover (please note the direction).
3. Mount 12 rechargeable "AA" batteries into the battery chamber one by one in compliance with the directions of the positive and negative poles as shown in the legends inside the battery chamber.
4. Place the battery chamber in the battery reservoir and close the battery cover.
5. The dismounting procedures are the reversed actions; however make sure the battery cover fits in the lock slot.

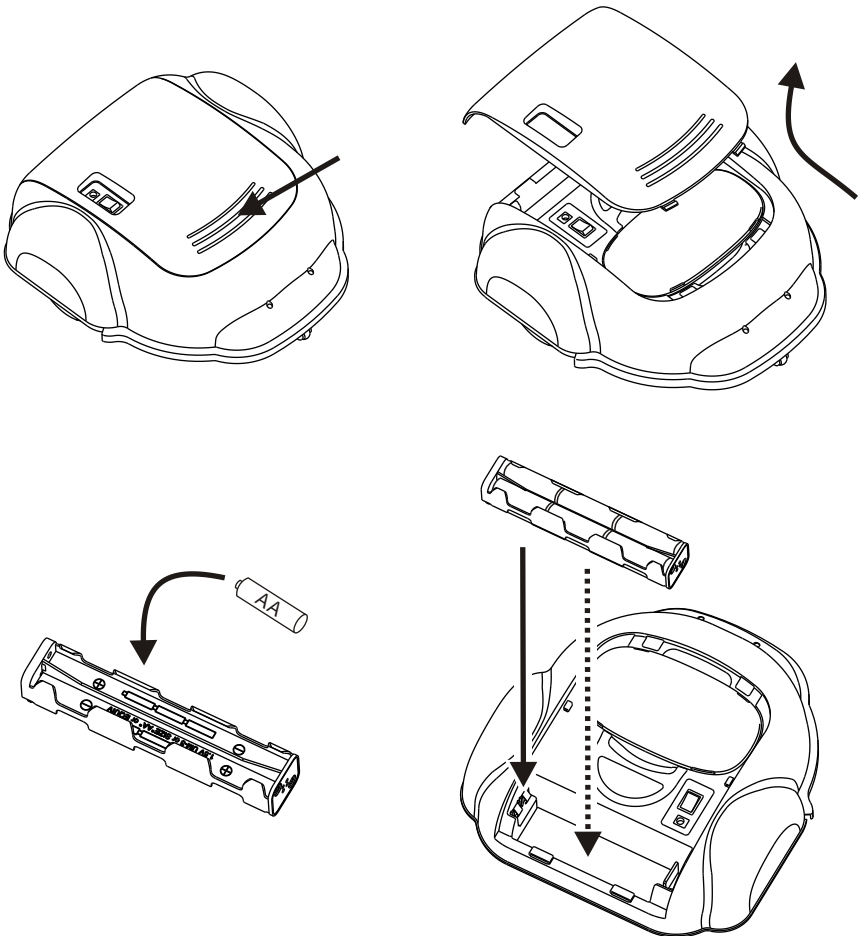

RECHARGING BATTERY

1. When you first recharge the batteries, it takes 12 hours to fully recharge them.
2. If the power indication lamp stays red, it indicates that the battery needs recharging immediately.
3. Make sure the cleaner is off and the batteries are properly mounted.
4. Plug one end of the AC power transformer into the AC power outlet, and another end into the socket for charger.
5. The power indication lamp stays green when the battery is fully recharged.

Transformer plug
(DC17V 200mA)

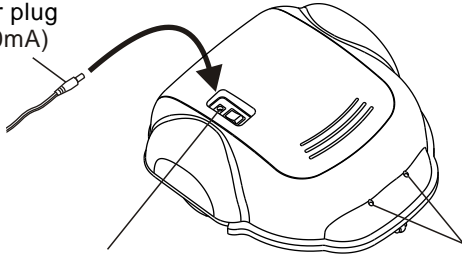

Socket for charger

Power indication lamps

OPERATION METHOD

To insure the best results when using the P4900 Robotic Vacuum, first remove clothes, paper, cable, extension cables and other potential obstacles from the floor. Roll up curtains and drapes, if necessary, to avert possible damage. In case a cable is entangled in the cleaner, the cable will move around as the cleaner is working and could tip over your table, chairs, cabinets or cupboard. Never use the unit directly on a person or pet in order to clean hair. Only use the unit on flooring.

If the room links to a stairway or steps, use household items to block the opening to the stairway or steps. Otherwise the cleaner will fall down the stairway or steps causing damage.



Starting Operation

1. Clean the dust bin.
2. Place the P4900 Robotic Vacuum in a location in the room with the most free space.
3. Turn the power switch to the ON position then the two power indication lamps will flash alternately.
4. When the battery runs out of power, the red power indication lamp will light on, and the cleaner will automatically stop.
5. **When you do not use the cleaner or before recharging, please make sure The P4900 is off.**

OPERATION METHOD

Using Electrostatic Dust Mopping Paper For non-carpet surfaces

1. Insert the border of electrostatic dust mopping paper into the grip slot of the dust mopping paper holder.
2. Aim the 2 holes of the dust mopping paper holder at the 2 bolts (inside the 2 big wheels) and click the holder on the bottom of the cleaner.

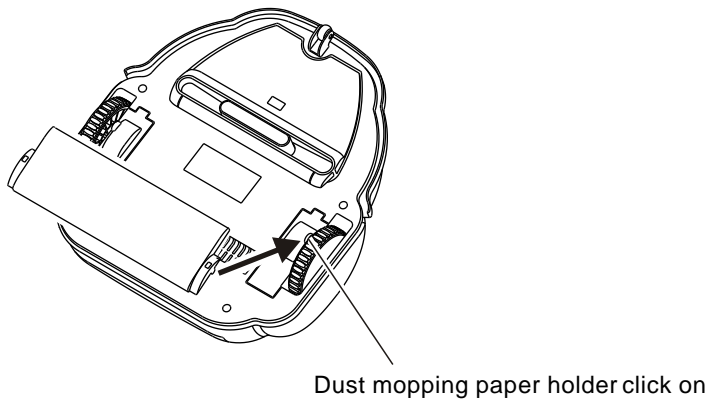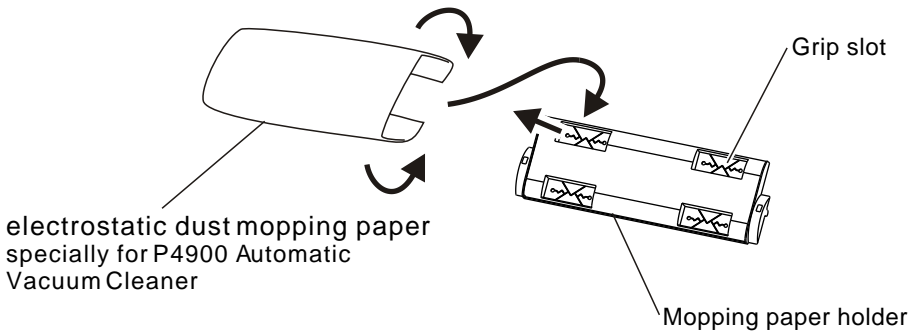





CLEANING AND MAINTENANCE

Maintenance Method

The operation and maintenance of the P4900 is very simple. After every use, clean any dirt left on the dust bin and filter. It is not necessary to clean the intake after every use.


Cleaning Dust Bin

1. Press and push the battery cover (please note the direction) to open the battery cover.
2. Release the dust bin from the grip slot and take out the dust bin.

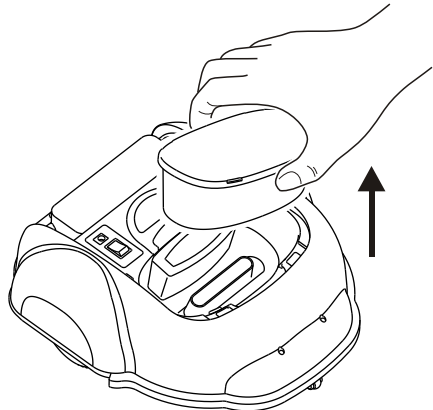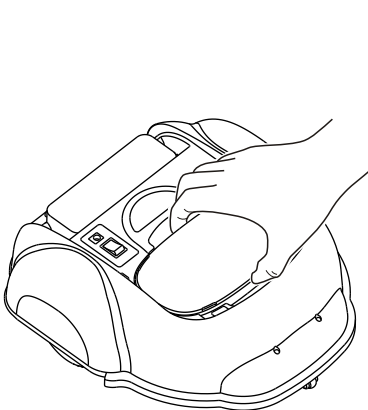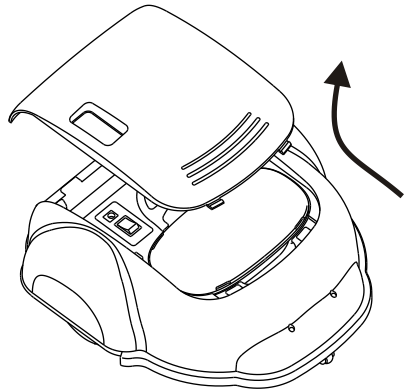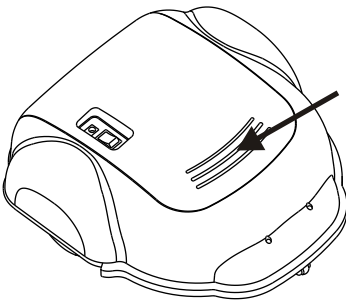



CLEANING AND MAINTENANCE

1. Open the upper cover of the dust bin.
2. Lift up and take out the filter.
3. Dump the contents of the dust bin into the trash bin.

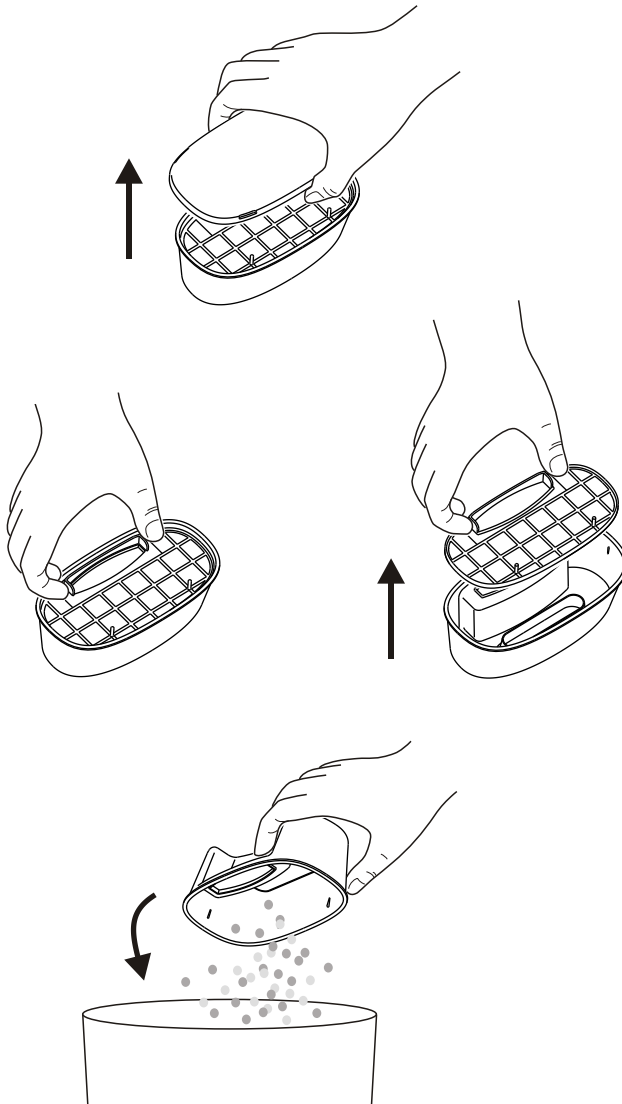

CLEANING AND MAINTENANCE


1. Rinse the dust bin with tap water. It is not necessary to wash every time.
2. Periodically clean the filter with used toothbrush .
3. Once dry, reinstall the filter and the dust bin lid.
4. Never reinstall the filter wet. If you do, damage may occur. Allow the filter to dry overnight.

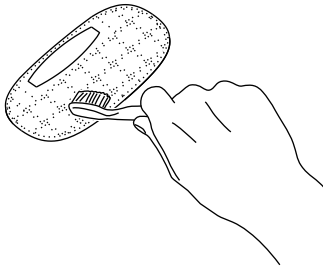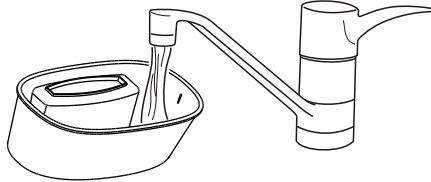

Cleaning Intake

After repeated use, dust can accumulate around the intake of the P4900 and the working efficiency is therefore diminished. To ensure the best efficiency and constant air flow, the intake should be cleaned periodically.

1. Turn off the power and place bottom of the smart cleaner upward on a flat surface such as the floor or a table.
2. Wipe and remove any hair or other matter away from the intake.

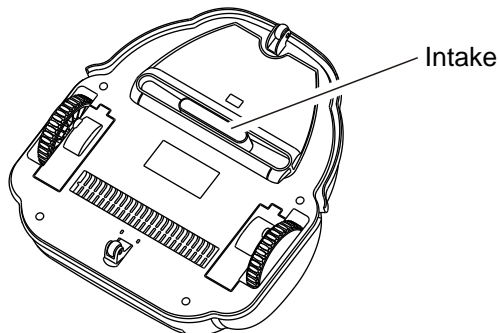

P3 INTERNATIONAL CORPORATION LIMITED WARRANTY

P3 INTERNATIONAL CORPORATION ("P3") warrants to the original retail purchaser only, that its product is free from defects in material or workmanship under the condition of normal use and service for a period of six (6) months from the date of purchase. In the event that a defect, malfunction or failure occurs or is discovered during the warranty period, P3 will repair or replace at its option the product or component part(s) which shall appear in the reasonable judgment of P3 to be defective or not to factory specifications. A product requiring service is to be returned to P3 along with the sales receipt or other proof of purchase acceptable to P3 and a statement describing the defect or malfunction. All transportation costs shall be borne by the owner and the risk of loss shall be upon the party initiating the transportation. All items repaired or replaced thereunder shall be subjected to the same limited warranty for a period of six (6) months from the day P3 ships the repaired or replaced product. The warranty does not apply to any product that has been subject to misuse, tampering, neglect, or accident or as a result of unauthorized alterations or repairs to the product. This warranty is void if the serial number (if any) has been removed, altered, or defaced. This warranty is in lieu of all warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose which are expressly excluded or disclaimed. P3 shall not be responsible for consequential, incidental or other damages, and P3 expressly excludes and disclaims liability for any damages resulting from the use, operation, improper application, malfunction or defeat of any P3 product covered by this limited warranty. P3's obligation is strictly and exclusively limited to the replacement or repair of any defective product or component part(s). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. P3 does not assume or authorize anyone to assume for it any other obligation whatsoever. Some states do not allow limitation on how long an implied warranty lasts, so the above limitations may not apply to you. It is the owner/user's responsibility to comply with local, state, or federal regulations, if any, that may pertain to P3 products or their use. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you experience difficulty in the operation of your unit, or if your unit requires repair please contact:

P3 INTERNATIONAL CORPORATION
TECHNICAL SUPPORT

Tel: 212-741-7289

Fax: 212-741-2288

Email: techsupport@p3international.com

