

Operating Manual

P8280

Clever Tether

Thank you for purchasing the P8280 Clever Tether. The Clever Tether Laptop Alarm is the easy way to protect your laptop from theft via its USB port. If you need to leave your computer unattended for a moment, you can count on the Clever Tether to alert you if someone tries to steal it. There's no software to install and no hardware drivers to worry about. You will feel reassured in knowing your laptop and information are safe and secure where you left it.

This unit will provide you with years of service if cared for properly. Please read these operating instructions thoroughly before use.

How to Use:

- **Set Up and Arming**

1. Uncoil the Tether from the unit and secure it around a stationary object such as a desk leg, etc.
2. Loop the USB head through the hole in the unit and plug into your laptop.
3. When the tether is plugged in, the alarm will beep once.
4. Remove the key to arm the alarm; a short beep will sound to confirm alarming.
5. **Note:** Two things can affect proper arming
 - Bad contact in/with the laptop USB port.
 - If the key is removed before connecting to the USB port.

- **Disarming**

1. To disarm the unit, replace the key into the Clever Tether and unplug from your laptop.

- **Silencing the Alarm**

1. If the USB is pulled from the socket without the key being inserted beforehand or if the cord is cut, the alarm will sound for one minute.
2. To silence the alarm, insert the key into the unit.

- **Caution**

1. **DO NOT** expose to water, freezing or direct heat, damage may occur.
2. **Choking Hazard:** Keep the unit away from children. Small parts can cause injury if misused or ingested.
3. The alarm sound is very loud. Do not place the alarm near your ear. Hearing impairment may occur.

- **Note**

1. The alarm key can be used with any Clever Tether unit. When the USB is connected to the laptop, the Clever Tether unit identifies the unique code of the inserted key. To

disarm you will need the same key. For example, unlimited alarms/laptops can be armed with one (master) key.

2. If the key is lost, when you unplug from your laptop, the alarm will sound for one minute. You can continue using the unit with a new key. The new key will be recognized by the unit when you arm the alarm.
3. If a stationary object is not available for use, one suggestion would be to create your own such as mounting a metal loop or drilling an opening in a desk.

Specifications:

Model: P8280
Batteries (Included): 3x LR44 Alkaline
Cord Length: 60 Inches
Dimensions: 2 ½" Diameter x 1"
Weight: 4oz.
Contents of Box: Clever Tether and Master Key

*Specifications subject to change without notice.

P3 INTERNATIONAL CORPORATION LIMITED WARRANTY

P3 INTERNATIONAL CORPORATION ("P3") warrants to the original retail purchaser only, that its product is free from defects in material or workmanship under the condition of normal use and service for a period of six (6) months from the date of purchase. In the event that a defect, malfunction or failure occurs or is discovered during the warranty period, P3 will repair or replace at its option the product or component part(s) which shall appear in the reasonable judgment of P3 to be defective or not to factory specifications. A product requiring service is to be returned to P3 along with the sales receipt or other proof of purchase acceptable to P3 and a statement describing the defect or malfunction. All transportation costs shall be borne by the owner and the risk of loss shall be upon the party initiating the transportation. All items repaired or replaced thereunder shall be subjected to the same limited warranty for a period of six (6) months from the day P3 ships the repaired or replaced product. The warranty does not apply to any product that has been subject to misuse, tampering, neglect, or accident or as a result of unauthorized alterations or repairs to the product. This warranty is void if the serial number (if any) has been removed, altered, or defaced. This warranty is in lieu of all warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose which are expressly excluded or disclaimed. P3 shall not be responsible for consequential, incidental or other damages, and P3 expressly excludes and disclaims liability for any damages resulting from the use, operation, improper application, malfunction or defeat of any P3 product covered by this limited warranty. P3's obligation is strictly and exclusively limited to the replacement or repair of any defective product or component part(s). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. P3 does not assume or authorize anyone to assume for it any other obligation whatsoever. Some states do not allow limitation on how long an implied warranty lasts, so the above limitations may not apply to you. It is the owner/user's responsibility to comply with local, state, or federal regulations, if any, that may pertain to P3 products or their use. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you experience difficulty in the operation of your unit, or if your unit requires repair please contact:

P3 INTERNATIONAL CORPORATION
TECHNICAL SUPPORT

Tel: 212-741-7289

Fax: 212-741-2288

Email: techsupport@p3international.com

Rev. 0711